



Fiero Gas Filler Tube Replacement

Step 1 Remove Inner Wheelwell

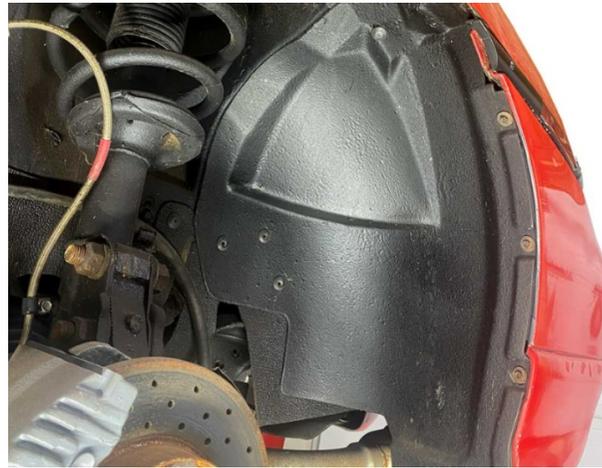

After removing the left rear wheel, removing the 7mm head screws and plastic retainers holding the wheelwell liner in place.

Step 2 Remove Filer Ground Strap

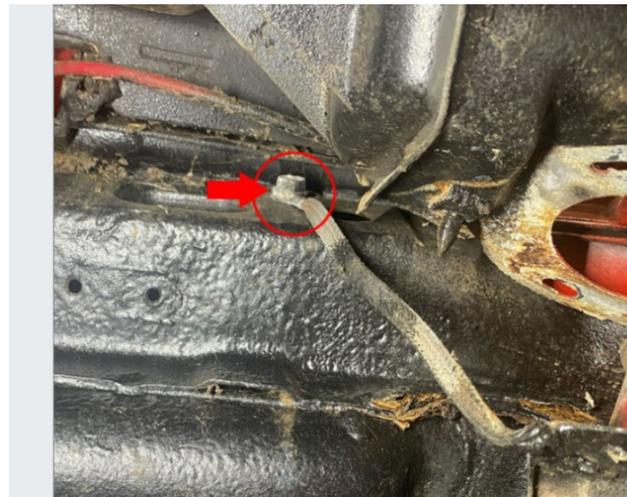

The filler will be visible once the wheelwell is removed. From below, you will see a 10mm head screw attaching the ground strap. Use a 10mm wrench (ratcheting wrench will make it quickest) to remove the ground strap screw.

Fiero Gas Filler Tube Replacement

Step 3 Remove Filler Door Assembly



The filler door will need to be removed to gain access to the screws holding the filler tube to the quarter panel. Remove these 7mm head screws and pull the assembly out and allow to hang from its remote cable. Once removed, you will be able to remove the three 7mm head screws attaching the filler tube.

Step 4 Disconnect Hoses at the Tank



Remove the hose clamps and filler hose connecting the gas tank to the filler tube.

Step 5 Remove Filler Tube & Install New Tube



You should now be able to snake the filler tube out through the wheelwell opening.

Install the new filler tube in reverse order.